





DEZE HANDLEIDING GEBRUIKEN !! / UTILISER CE MANUEL !!

ASSEMBLY INSTRUCTION


EC 60140-S5V - EUREKA TV KAST / MEUBLE TV / TV CABINET

  - ~ Before assembly, please read the instructions ~
- ~ Keep these instructions for future reference ~
- ~ Follow these steps to assemble the product ~

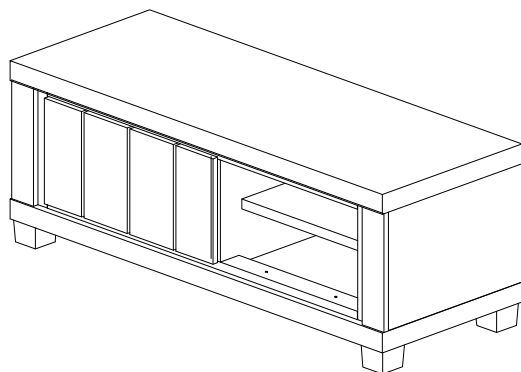


HARDWARE	A	B	C	D	E	F
	PLASTIC DOWEL 8X25	CB SCREW M3.5X16	CB SCREW M4X30	CB SCREW M4.5X45	CSK CAP M6X50	CSK CAP M6X90
	36pcs	12pcs	6pcs	10pcs	8pcs	6pcs
G1	G2	H	I	J1	J2	J3
MINIFIX 5654 (HOUSING)	MINIFIX 5654 (SCREW)	PVC SHELF SUPPORT	CAP	MAGNET WASHER	MAGNET SCREW	MAGNET PLATE
14pcs	14pcs	4pcs	22pcs	1pc	1pc	1pc
J4	K	L	M	N	O	
PUSH MAGNET	HINGES 5/8"	POWER NAIL 5/8"	SOFA LEG (H70mm) -BLACK	ALLEN KEY	CB SCREW M4X25	
1pc	2pcs	50pcs	5pcs	1pc	5pcs	

 
PART LIST

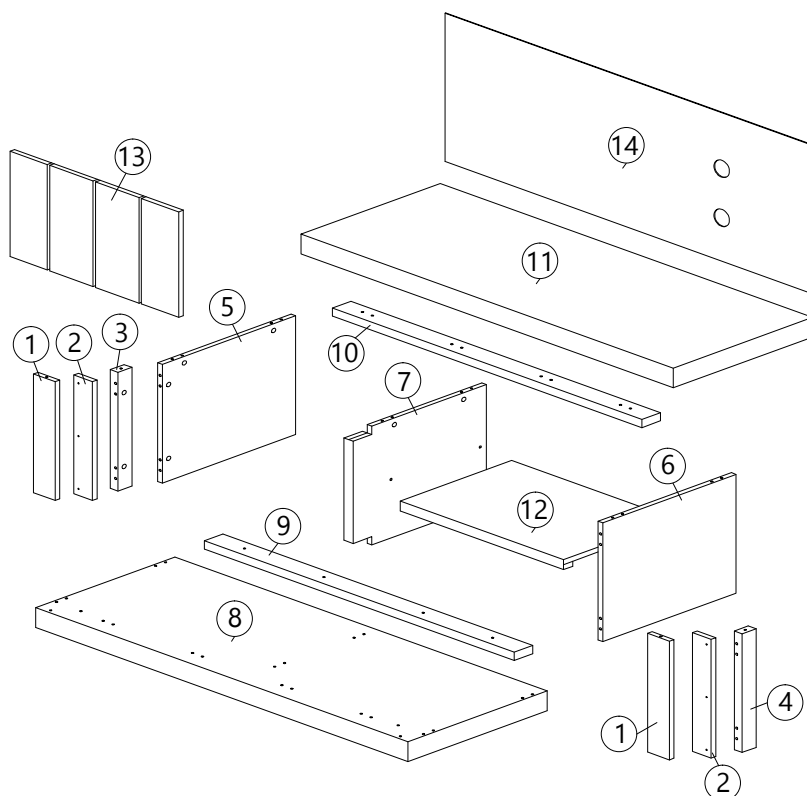

 
Step 1

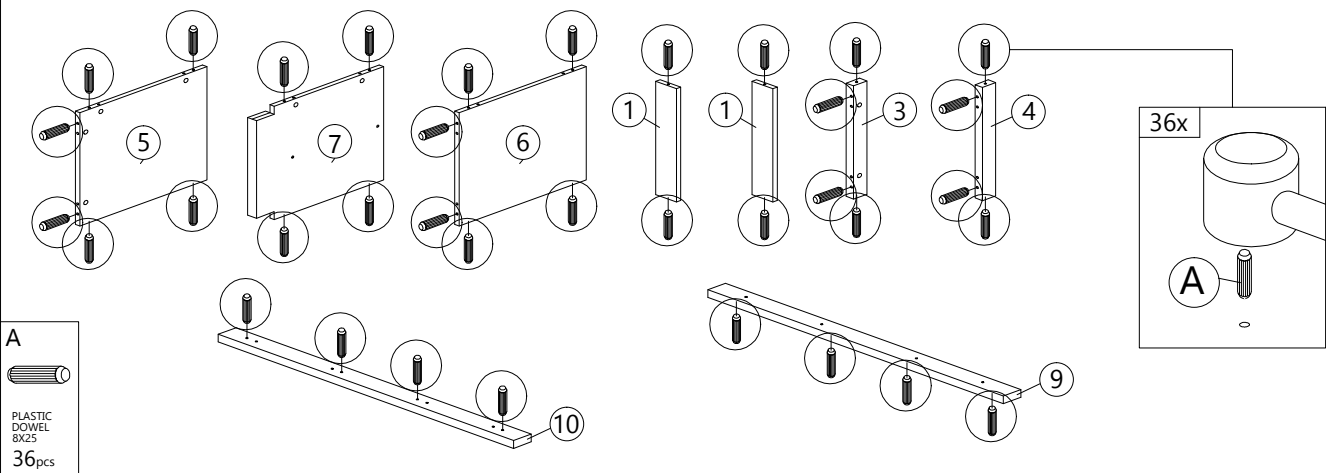

 
Step 2

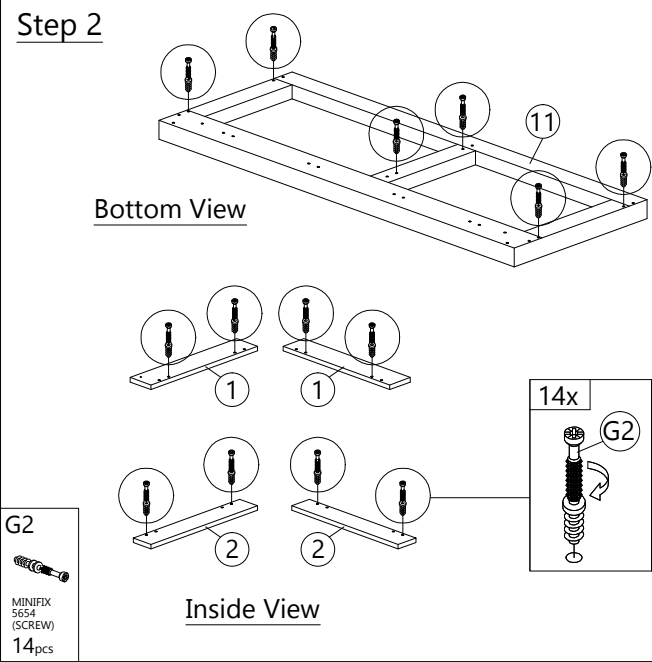

 
Step 3

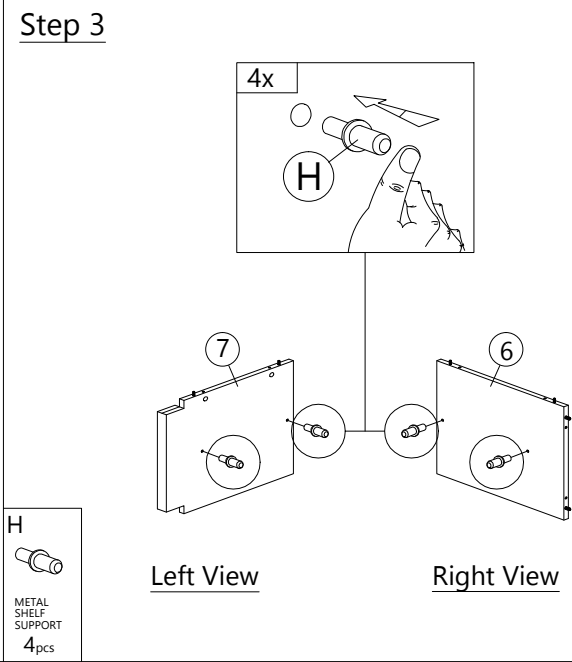


 
Step 4

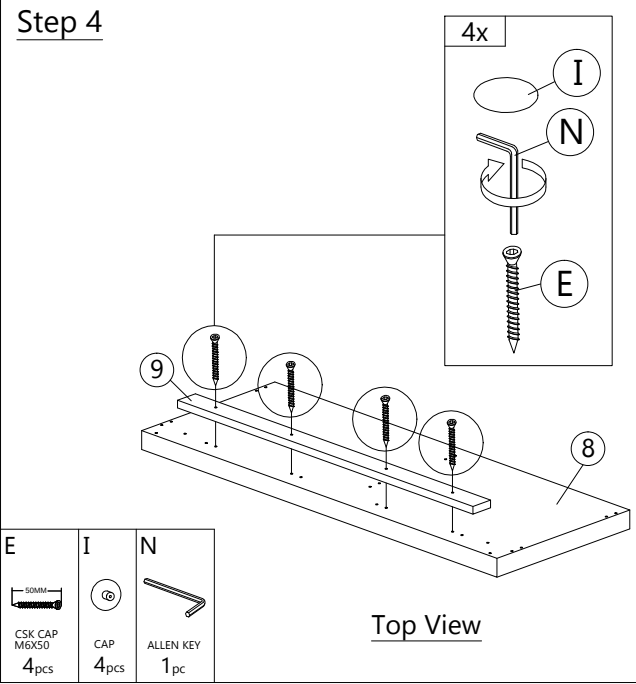

 Step 5


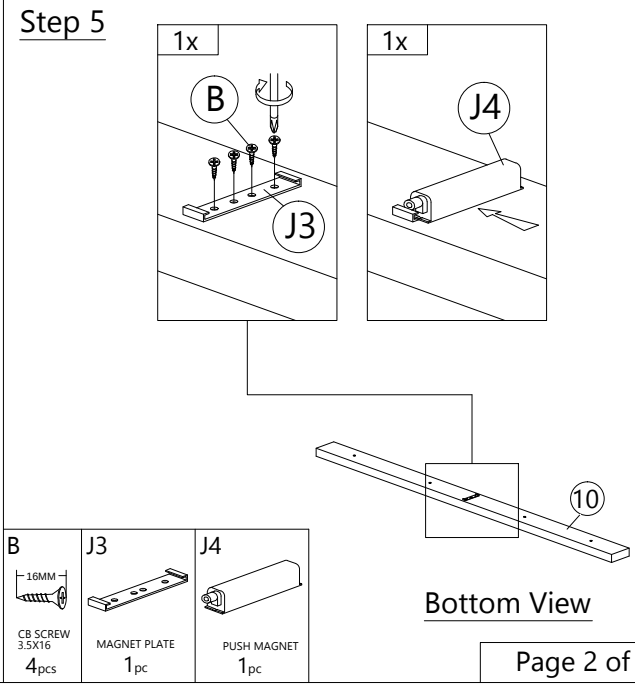


  Step 6

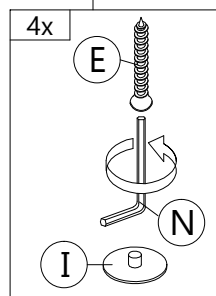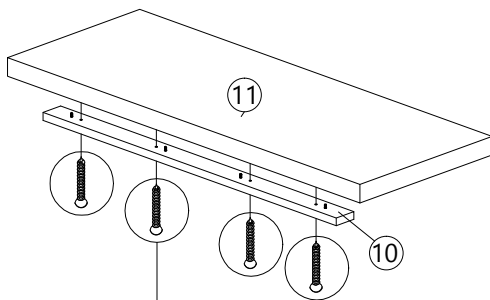

E	I	N
		
4pcs	4pcs	1pc

 
 
Step 7

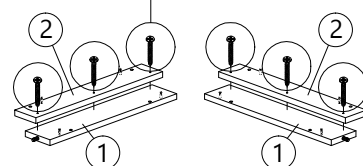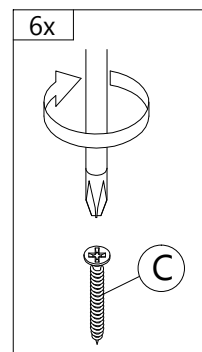

C



6pcs

  Step 8

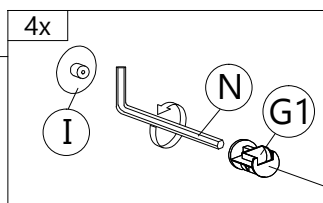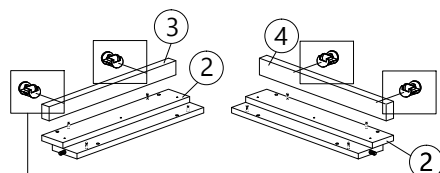



G1	I	N
		
4pcs	4pcs	1pc

  Step 9

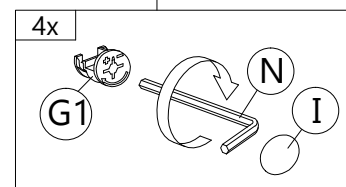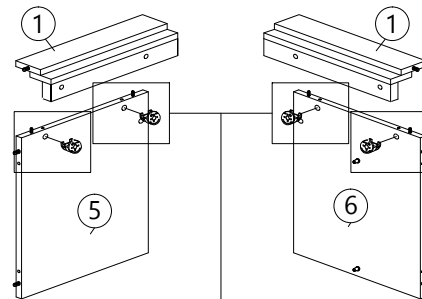



G1	I	N
		
4pcs	4pcs	1pc

  Step 10

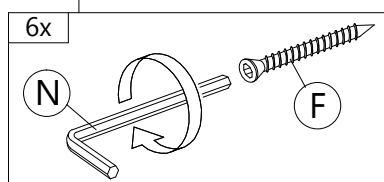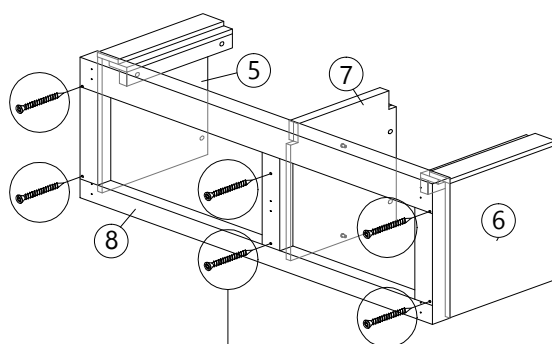


F	N
	
6pcs	1pc

  Step 11

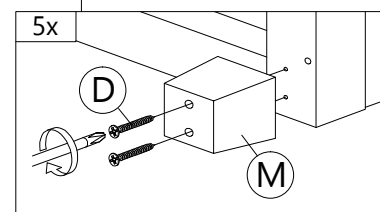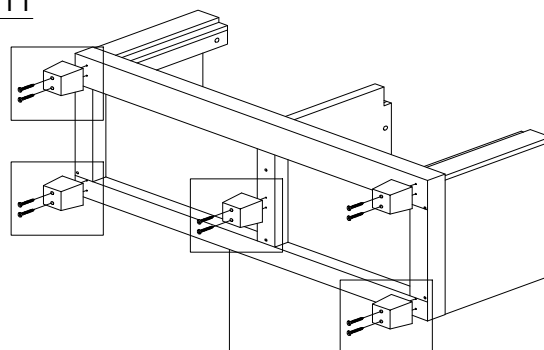



D	M
	
10pcs	5pcs

 Step 12

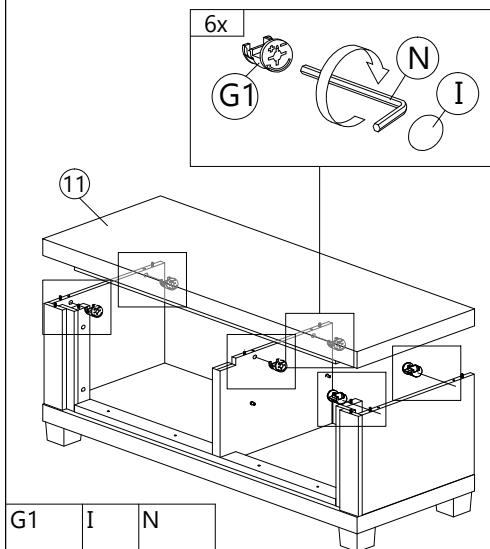


G1	I	N
6pcs	6pcs	1pc

  
Step 13

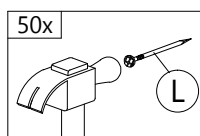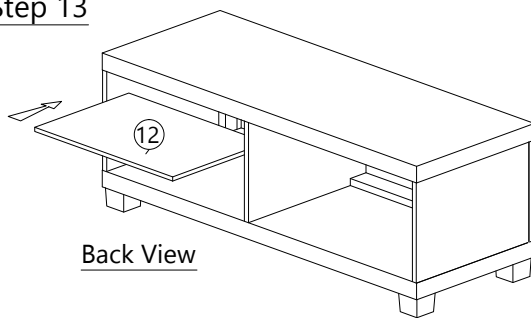

L
50pcs

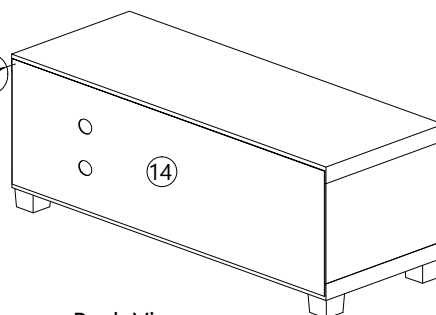 


 Step 14

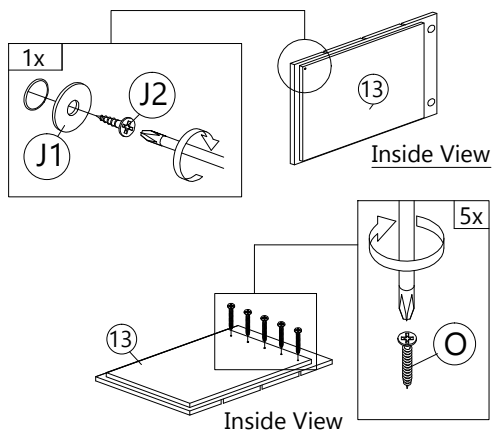


J1	J2	O
1pc	1pc	1pc

 
Step 15

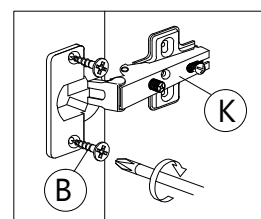

B	K
4pcs	2pcs

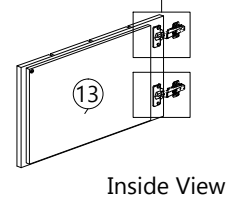 

 Step 16

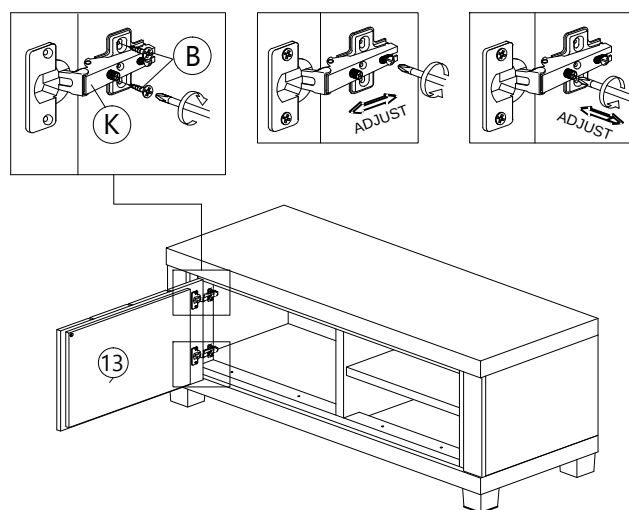

B
4pcs

Completed

