



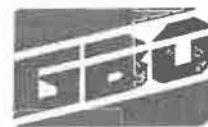




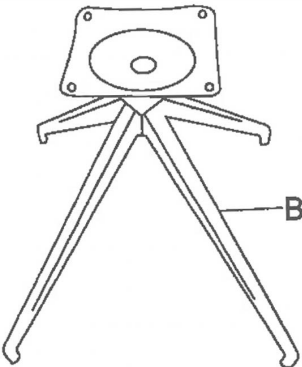
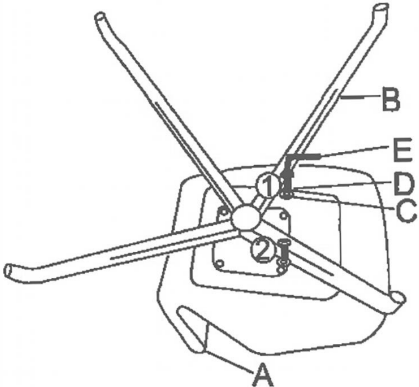
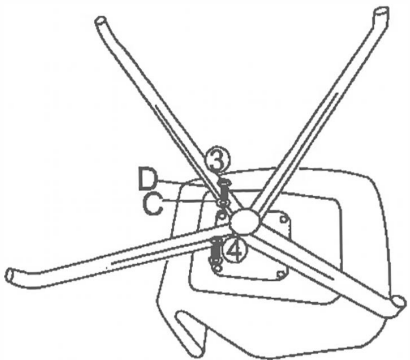



ASSEMBLY INSTRUCTION

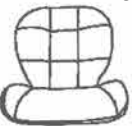

ITEM:ST1706 - STOEL - PU COGNAC

A x1 	B x1 	C x4  $\phi 6 \times \phi 16 \times 1.5$	D x4  M6X16	E x1  M5	
---	---	---	--	---	---

1 	2  TIGHT 60%
3 	4  TIGHT 100%

Tight all screws 60% Then put the chair on flat surface, make sure the chair is flat.
Then tight all screws 100%. Once in a while, tight all screws.