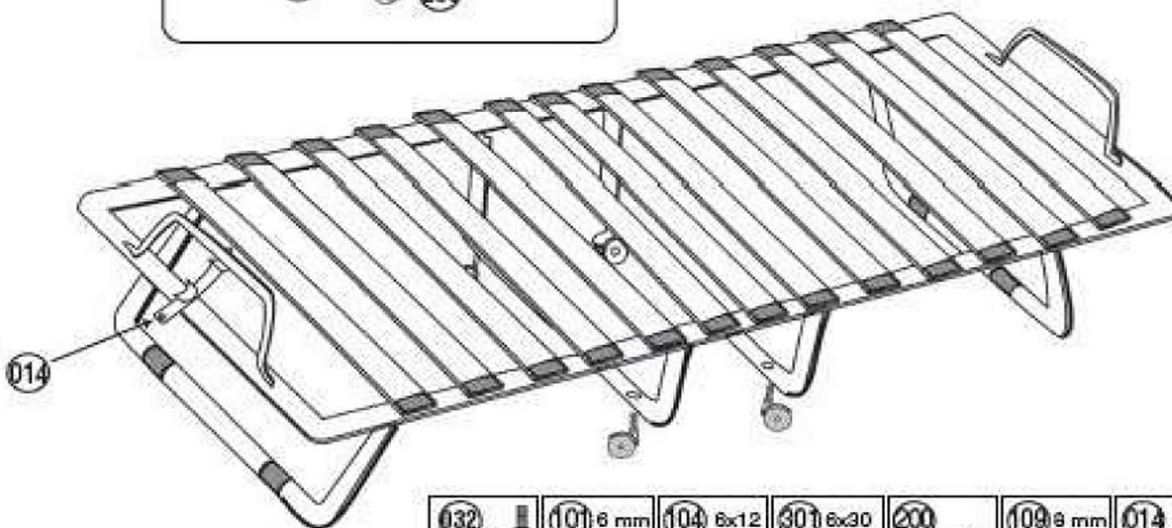
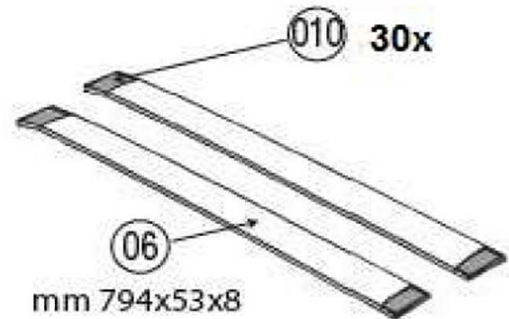
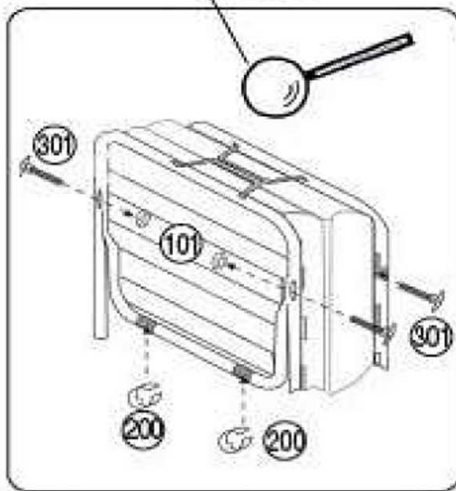










ATTENTION: Pour eviter des endommagements il faut serrer bien les boulons.

ATTENTION: Insert and close the nuts on the screws as per the assembly instruction this is necessary to avoid damages.



							
032	101 6 mm	104 6x12	301 6x30	200	109 8 mm	014	010
4 x	8x	4x	4x	4x	4x	1x	30x